


Use the 4 Front Panel/Circuit Board Screw Hole Shown to position the Template.

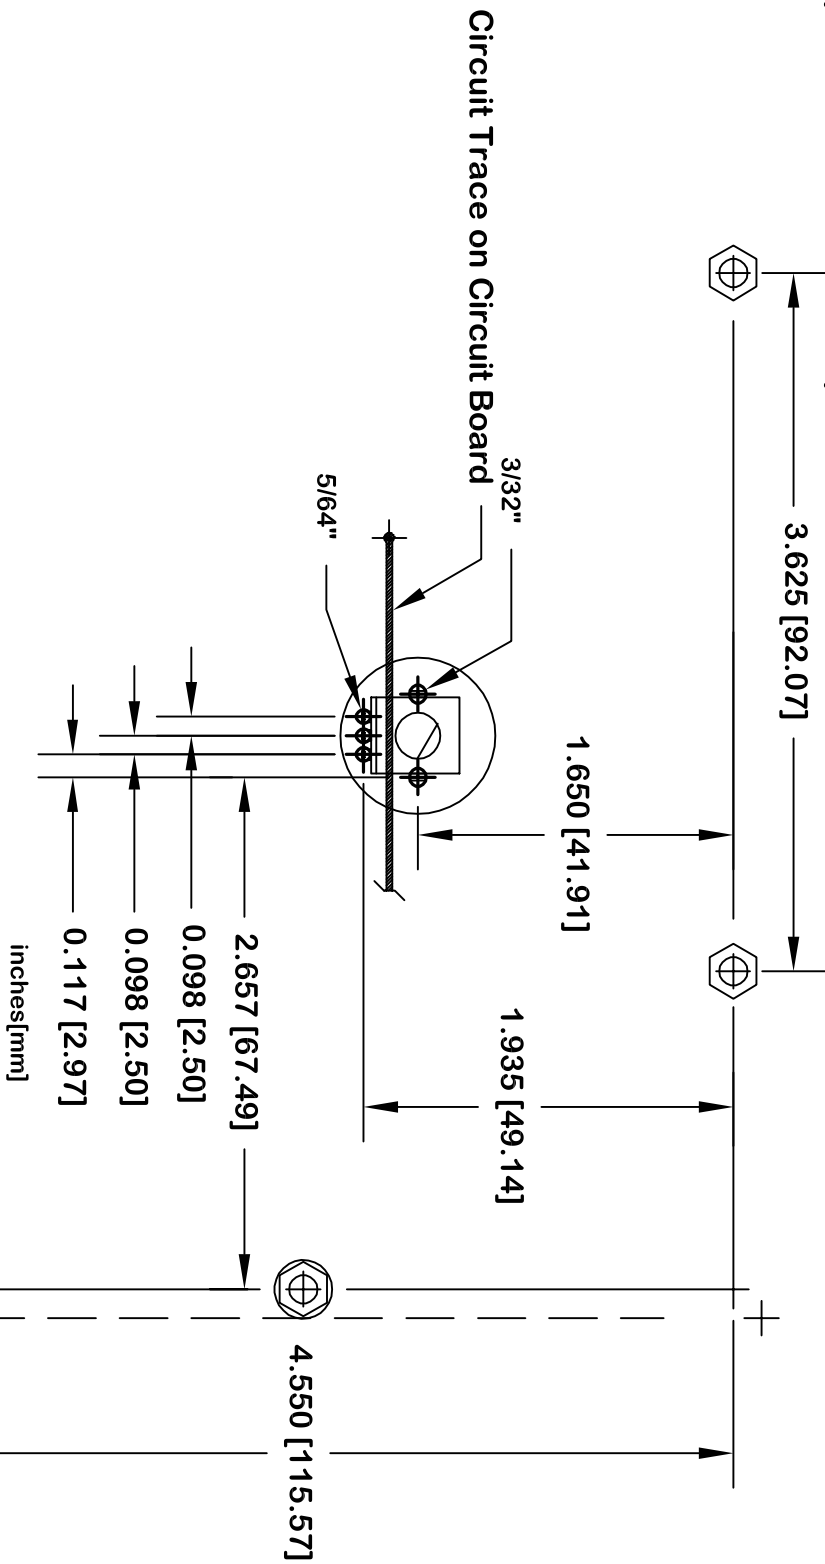

## View of Bottom Side of Circuit Board

Board Edge, do NOT use to spot holes for drilling.